

DMX CHANNELS

Mode/Channel		Function	Values	Description
M1	M2			
1	1	Pan	0-255	Pan movement
2		Pan fine	0-255	Fine control of Pan movement
3	2	Tilt	0-255	Tilt movement
4		Tilt fine	0-255	Fine control of Tilt movement
5	3	Pan control	0-127	No function
			128-189	Continuous rotation fast-slow,Forwards
			190-193	Stop rotation
			194-255	Continuous rotation slow-fast,Backwards
6	4	Tilt control	0-127	No function
			128-189	Continuous rotation fast-slow,Forwards
			190-193	Stop rotation
			194-255	Continuous rotation slow-fast,Backwards
7	5	Red	0-255	Color saturation control-coarse 0-100%
8	6	Green	0-255	Color saturation control-coarse 0-100%
9	7	Blue	0-255	Color saturation control-coarse 0-100%
10	8	White	0-255	Color saturation control-coarse 0-100%
11	9	Shutter	0-31	Shutter closed
			32-63	Shutter open
			64-95	Strobe effect slow to fast
			96-127	Shutter open
			128-159	Pulse-effect in sequences slow to fast
			160-191	Shutter open
			192-223	Random strobe effect slow to fast
			224-255	Shutter open
12	10	Dimmer	0-255	Dimmer 0%...100%
13	11	Rotating prism	0-5	OFF
			6-127	ON
			128-189	Forwards rotation from fast to slow
			190-193	Prism rotation stop
			194-255	Backwards rotation from slow to fast
14	12	Frost	0-199	Frost swing out
			200-255	Frost swing in
15	13	Rotating prism2	0-127	Prism indexing
			128-189	Forwards prism rotation from slow to fast
			190-193	Prism rotation stop
			194-255	Backwards prism rotation from slow to fast
16	14	Zoom	0-255	Zoom from max.to min.beam angle

DMX CHANNELS

17	15	Speed Pan/Tilt	0-225	Max to min speed
			226-235	No function
			236-245	No function
			246-255	No function
18	16	Special function	0-19	No function
			20-29	No function
			30-39	No function
			40-79	No function
			80-99	Motor reset
			100-119	Internal program 1
			120-139	Internal program 2
			140-159	Internal program 3
			160-179	Internal program 4
			180-199	Internal program 5
			200-219	Internal program 6
			220-239	Internal program 7
			240-255	Internal program 8