

DMX CHANNELS

Mode/Channel			Function	Values	Description
M1	M2	M3			
1	1	1	Pan	0-255	0%-100%
		2	Pan fine	0-255	0%-100%
2	2	3	Tilt	0-255	0%-100%
		4	Tilt fine	0-255	0%-100%
	3	5	Pan&Tilt speed	0-225	Pan&Tilt Speed from fast to slow
				226-235	Black out (Pan/Tilt movement)
				236-245	Black out (Gobo/Color change)
				246-255	No function
3	4	6	Dimmer	0-9	Closed
				10-255	Dimmer from 0%-100%
4	5	7	Strobe	0-31	No function(Black)
				32-63	Open
				64-95	Strobe from slow to fast
				96-127	Open
				128-143	Strobe from slow to fast
				144-159	Strobe from fast to slow
				160-191	Open
				192-223	Random strobe from slow to fast
				224-255	Open
5	6	8	Color Wheel 12+1	0-10	White
				11-17	Color 1
				18-24	Color 1 + Color 2
				25-31	Color 2
				32-38	Color 2 + Color 3
				39-45	Color 3
				46-52	Color 3 + Color 4
				53-59	Color 4
				60-66	Color 4 + Color 5
				67-73	Color 5
				74-80	Color 5 + Color 6
				81-87	Color 6
				88-94	Color 6 + Color 7
				95-101	Color 7
				102-108	Color 7 + Color 8
				109-115	Color 8
				116-122	Color 8+Color 9
				123-129	Color 9

DMX CHANNELS

				130-136	Color 9+Color 10
				137-143	Color 10
				144-150	Color 10 + Color 11
				151-157	Color 11
				158-164	Color 11 +Color 12
				165-171	Color 12
				172-213	Color forward rotation from slow to fast
				214-255	Color backward rotation from slow to fast
6	7	9	Gobo	0-10	White
				11-15	Gobo 1
				16-20	Gobo 2
				21-25	Gobo 3
				26-30	Gobo 4
				31-35	Gobo 5
				36-40	Gobo 6
				41-45	Gobo 7
				46-50	Gobo 8
				51-55	Gobo 9
				56-60	Gobo 10
				61-65	Gobo 11
				66-75	Shake from slow to fast: gobo 1
				76-85	Shake from slow to fast: gobo 2
				86-95	Shake from slow to fast: gobo 3
				96-105	Shake from slow to fast: gobo 4
				106-115	Shake from slow to fast: gobo 5
				116-125	Shake from slow to fast: gobo 6
				126-135	Shake from slow to fast: gobo 7
				136-145	Shake from slow to fast: gobo 8
				146-155	Shake from slow to fast: gobo 9
				156-165	Shake from slow to fast: gobo 10
				166-175	Shake from slow to fast: gobo 11
				176-215	Rotation from fast to slow
				216-255	Rotation from slow to fast
7	8	10	Prism 1	0-127	Prism excluded
				128-255	Prism inserted
8	9	11	Prism 1 rotation	0-127	Position indel 0-540 angle degree
				128-190	Rotation from fast to slow
				191-192	Stop
				193-255	Rotation from slow to fast

DMX CHANNELS

9	10	12	Prism 2	0-127	Prism excluded
				128-255	Prism inserted
10	11	13	Prism 2 rotation	0-127	Position indel 0-540 angle degree
				128-190	Rotation from fast to slow
				191-192	Stop
				193-255	Rotation from slow to fast
11	12	14	Frost	0-127	No frost
				128-255	Frost
12	13	15	Focus	0-255	0%-100%
13	14	16	Function (>3sec)	0-24	Empty
				25-49	Reset:effects
				50-74	Empty
				75-99	Reset:complete
				100-124	Empty
				125-149	Reset:sound control
				150-174	Empty
				175-199	Lamp off
				200-224	Empty
				225-255	Lamp on